

Installation Guidelines


Interlok Advance Lighting System

Data Sheet: (sheet 1 of 2) 25/11/2013

Basic Wiring - Interlok Advance

Stair loom and distribution

The fuse should not be fitted or wiring connected until the system is tested and the circuit current is Measured.

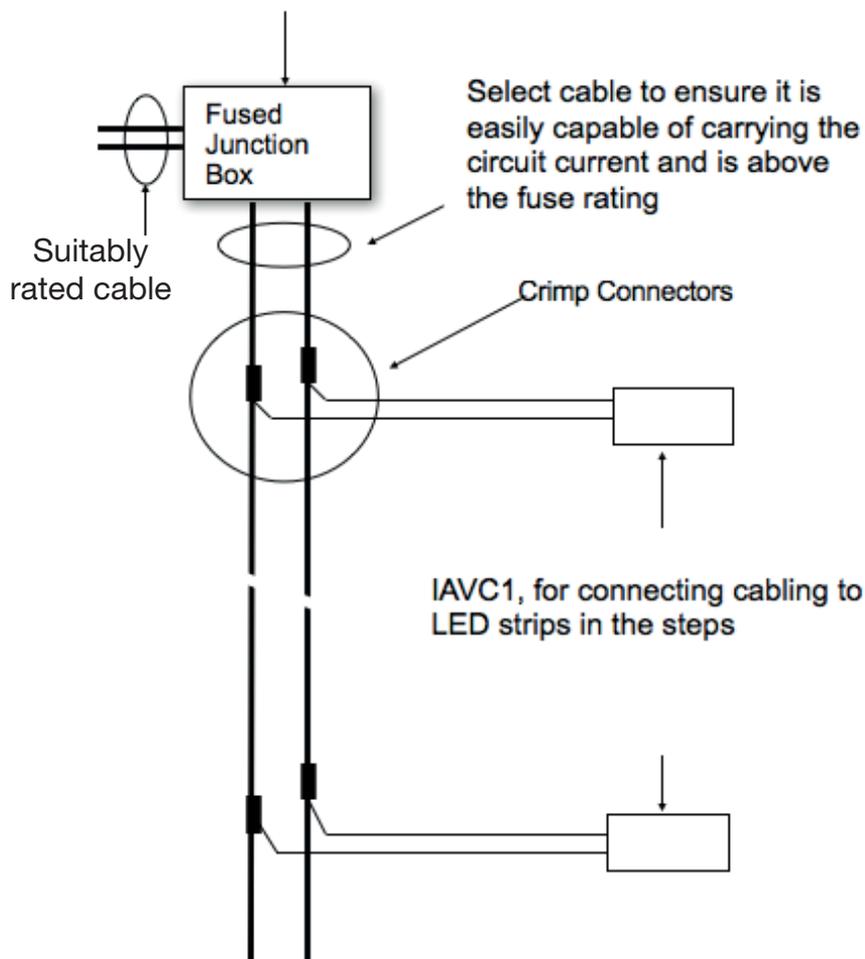

For long cable runs it is recommended that power is fed to both ends of the wiring

This will reduce voltage drop and associated problems.


Installation Guidelines Interlok Advance Lighting System

Data Sheet: (sheet 2 of 2) 25/11/2013


Fitting Details for Interlok Advance

Interlok Advance Strip

The Interlok Advance LED Strips may be connected together and/or cut to required length for your stair nosings

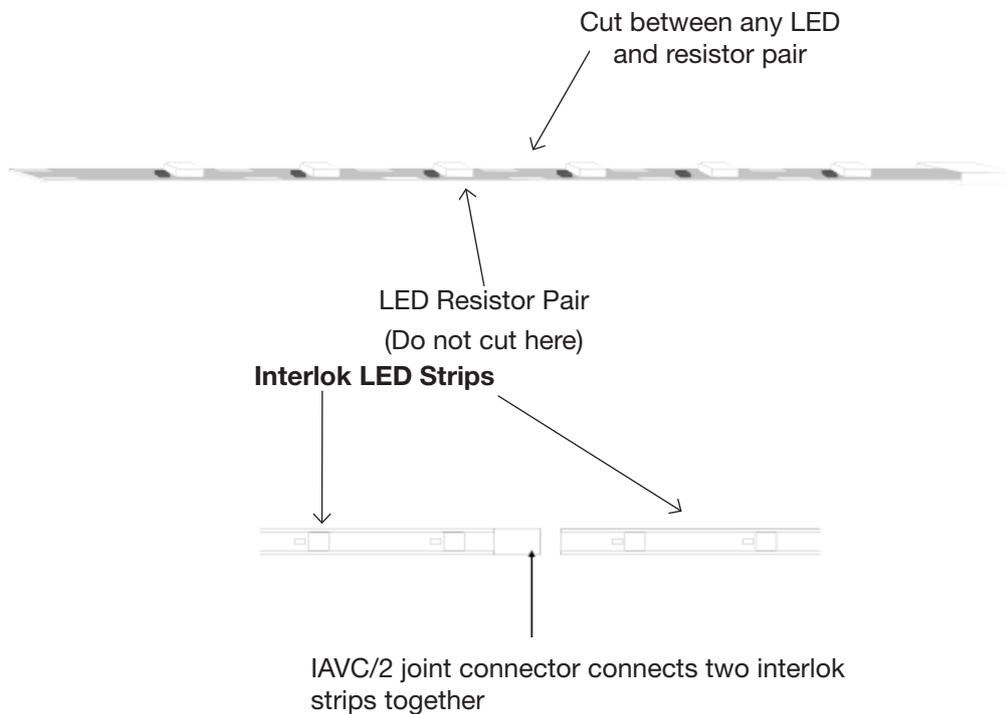

Use IAVC3 flexible connector to continue lighting on a returned step or corner

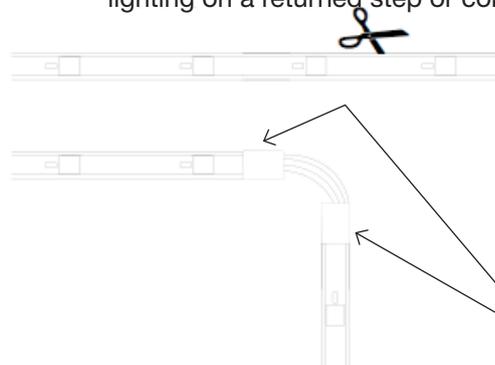

- 1) Cut the strip at the corner point; use the cut piece as the next board around the corner.
- 2) Use a sharp knife to scrape the circuit board on the top and bottom, for approximately 5mm, to reveal the copper conductors. Do this to both strips.
- 3) Attach both strips to the IAVC3.