


Installation Instructions

Joint System: 884-A01/A02-025/050

Data Sheet: (sheet 1 of 2) AR/DT/05.10.15

Note: Verify that the structural gap is in conformance with submittal data before beginning installation.

FIG. 1 (884-A01 Floor To Floor Shown)

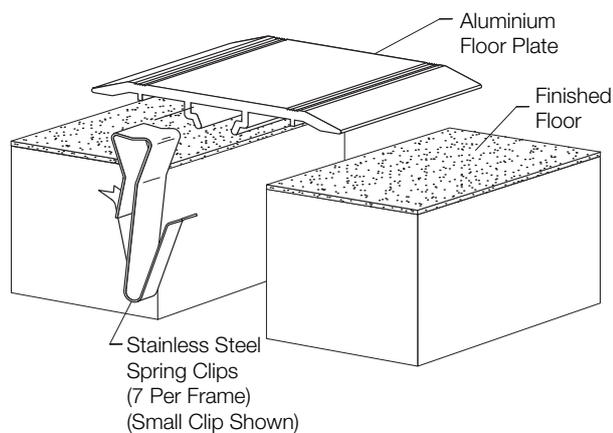

1. Install the architectural joint system on a level finished floor or wall surface. This may require adding leveling compound on top of the substrate to provide a smooth mounting surface.

Figure 1

2. Cut the aluminum components to the desired length.

3. The aluminum plates are extruded with a dovetail shaped channel on the underside for mounting of the spring clips. For 25mm joint widths, use J8J301 small spring clips. For 50mm joint width, use J8J302 large spring clips.

3a. For floor to floor (A01) and floor to wall (A02) conditions, use 7 spring clips per 3m length.


Installation Instructions

Joint System: 884-A01/A02-025/050

Data Sheet: (sheet 2 of 2) AR/DT/05.10.15

Note: Verify that the structural gap is in conformance with submittal data before beginning installation.

FIG. 2

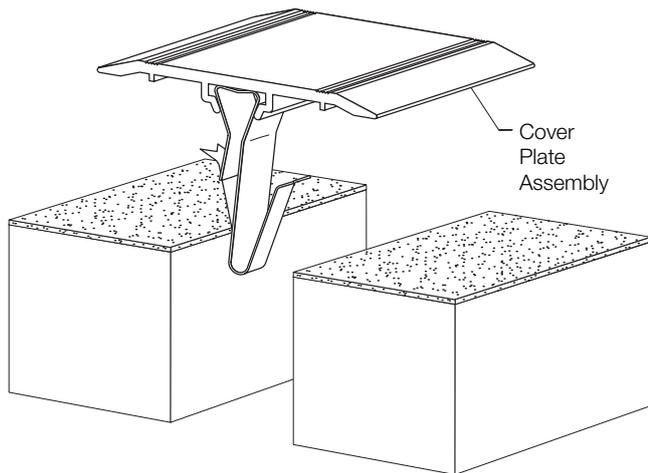

4. Firmly squeeze the top of the spring clip and slide down the channel to desired location.


Figure 2

5. Place the cover plate assembly over the structural gap with the spring clips facing into the joint opening. Press down firmly until the cover plate is located flat against the floor or wall surface.

Figure 3

6. Clean the exposed surfaces with a non-solvent cleaner.

FIG. 3 (884-A01 Floor to Floor Completed Installation)

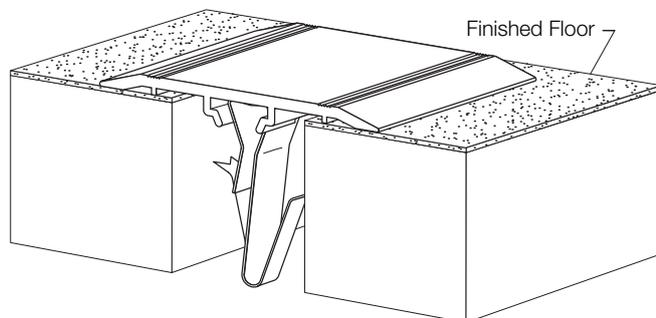

(884-A02 Floor to Wall Completed Installation)

